


BASIC INSTALLATION: WaveWare SPS-5 v7 PAGING SYSTEM with WaveWare Enterprise Messaging Software.

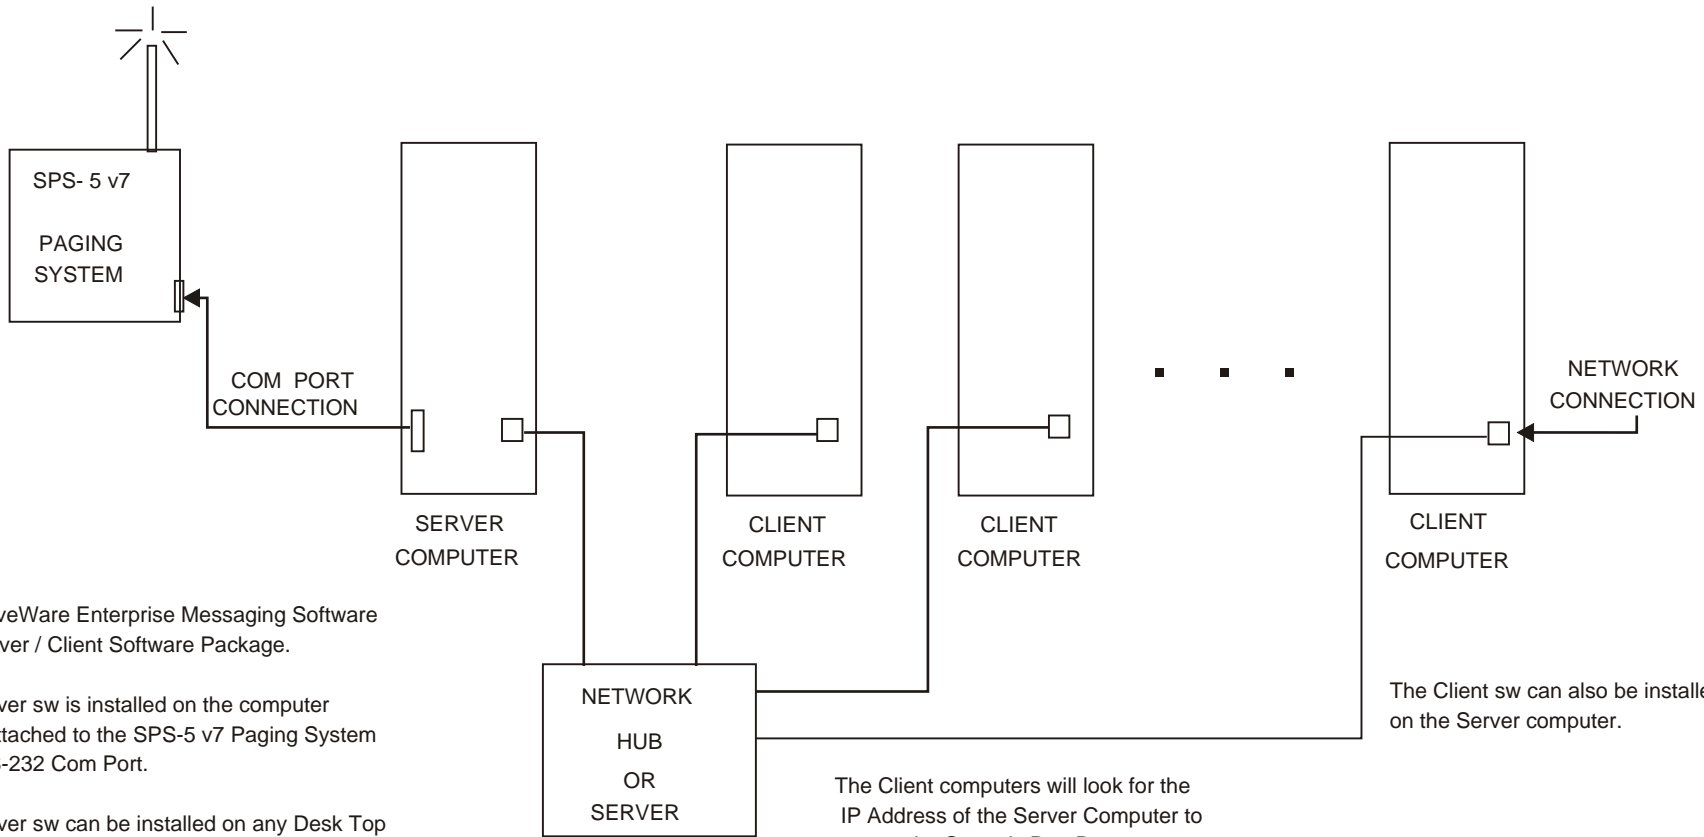

The WaveWare Enterprise Messaging Software is a Server / Client Software Package.

The Server sw is installed on the computer that is attached to the SPS-5 v7 Paging System via a RS-232 Com Port.

The Server sw can be installed on any Desk Top Computer, doesn't has to be a server model or a dedicated computer.

The Server computer will have the DataBase for the Pagers.

The Client sw is installed on any other computer that is on the same Network (LAN) as the server.

The Client sw looks for the DataBase of the computer for it's "Look Up Table" of pagers.

server

TOLERANCES DECIMAL +/- .015 HOLES +/- .002 ANGLES +/- 1/2 °		MATERIAL	FINISH NONE	DATE 06-02-05
		TITLE BASIC INSTALLATION OF SPS-5 v7 with WaveWare ENTERPRISE Messaging SW		DWN BY Bob Clyburn APP.
SCALE None	FIRST USED	WAVEWARE TECHNOLOGIES DALLAS, TEXAS 972-479-1702		DWG. NUMBER REV. 1