

RCD-1 PROGRAMMING DIAGRAM INSTRUCTIONS

PASSWORD FOR PROGRAM IS: CD 5580 (NO SPACES, ALL CAPITALS LETTERS)


IN MOST CASES THE PROGRAM NEEDS TO RUN ON AN OLD COMPUTER WITH WINDOWS 98 OS.

NOTE: (The RJ-12 6-PIN TO RJ-45 8-PIN CABLE IS THE PROGRAMMING CABLE)

THE PROGRAMMING CABLE IS FOR PROGRAMMING ONLY

NOT TO BE USED OR ATTACHED TO A LED DISPLAY

(PLEASE USE The RJ-12 6-PIN TO RJ-12 6-PIN Cable FOR USE WITH THE SIGN)

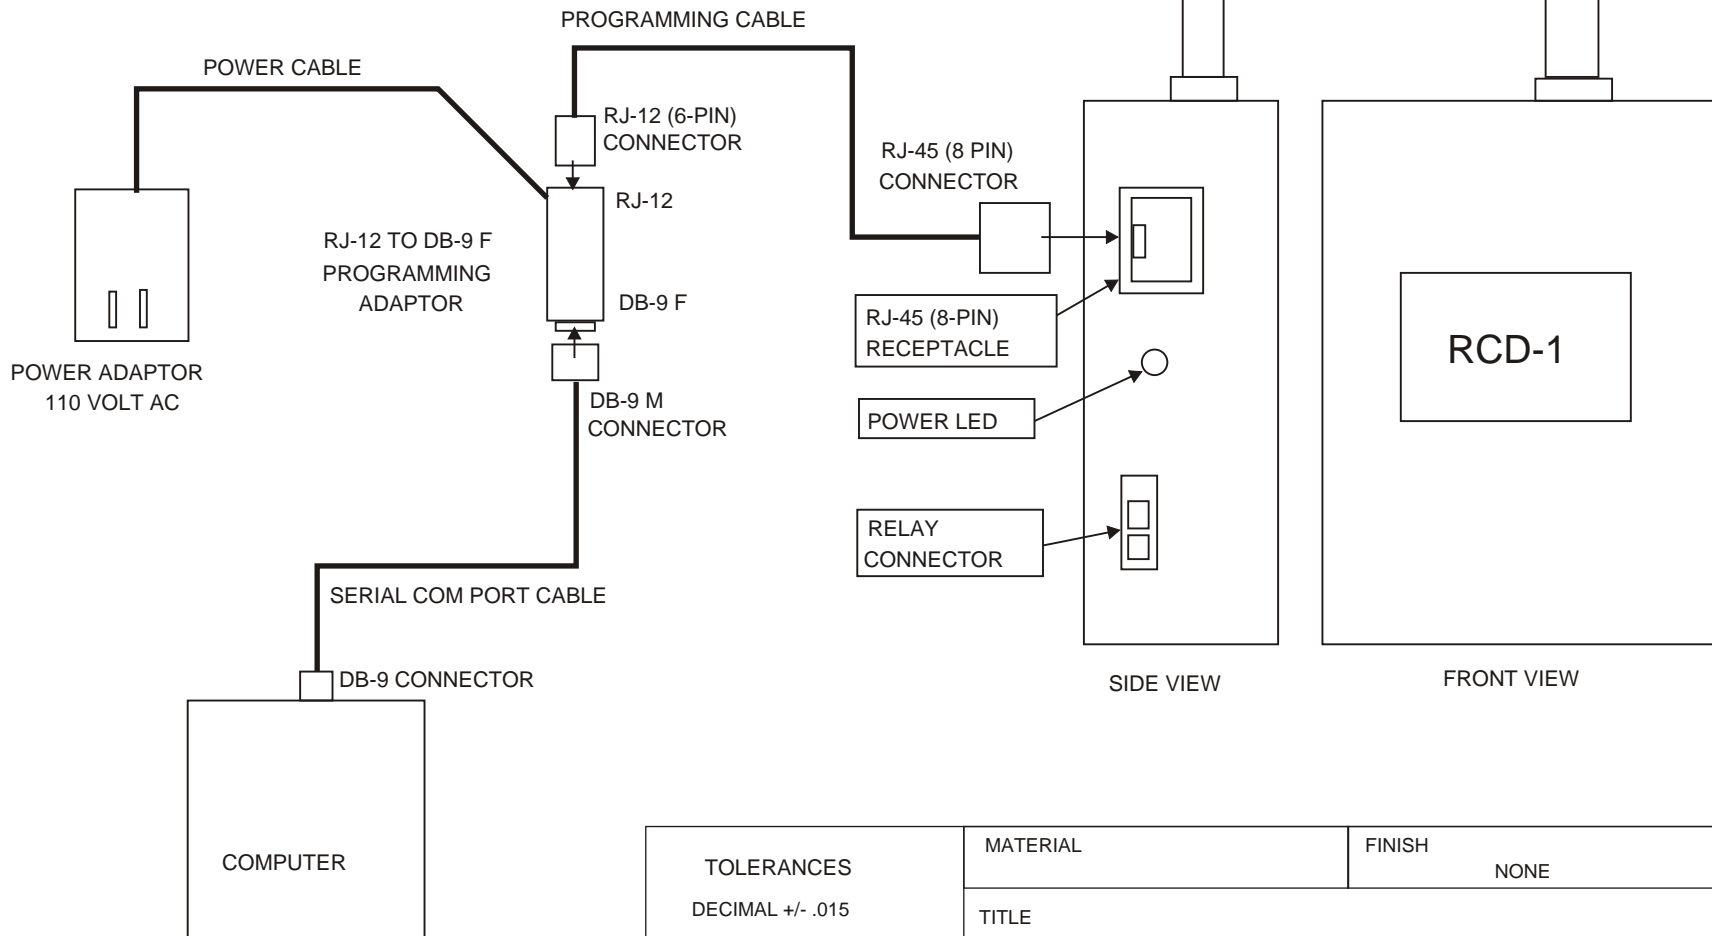

TOLERANCES DECIMAL +/- .015 HOLES +/- .002 ANGLES +/- 1/2 °		MATERIAL	FINISH NONE	DATE 12-15-04
		TITLE DIAGRAM FOR PROGRAMMING THE RCD-1		DWN BY BOB CLYBURN APP.
SCALE None	FIRST USED	WAVEWARE TECHNOLOGIES DALLAS, TEXAS 972-479-1702	DWG. NUMBER	REV. 1