


# Diagram of SPS-5 v8 Paging System with Connector and Indicators with Basic Installation Setup

## The SPS-5 v8 Paging System comes with:

- Main v8 System in a 8"x9"x2" Enclosure
- 1/2-wave UHF BNC Antenna
- 110v AC to 12v DC Power Supply / Adaptor
- Standard RS-232 Serial Cable (10ft.)
- Wall Mounting Hardware
- Product Support CD

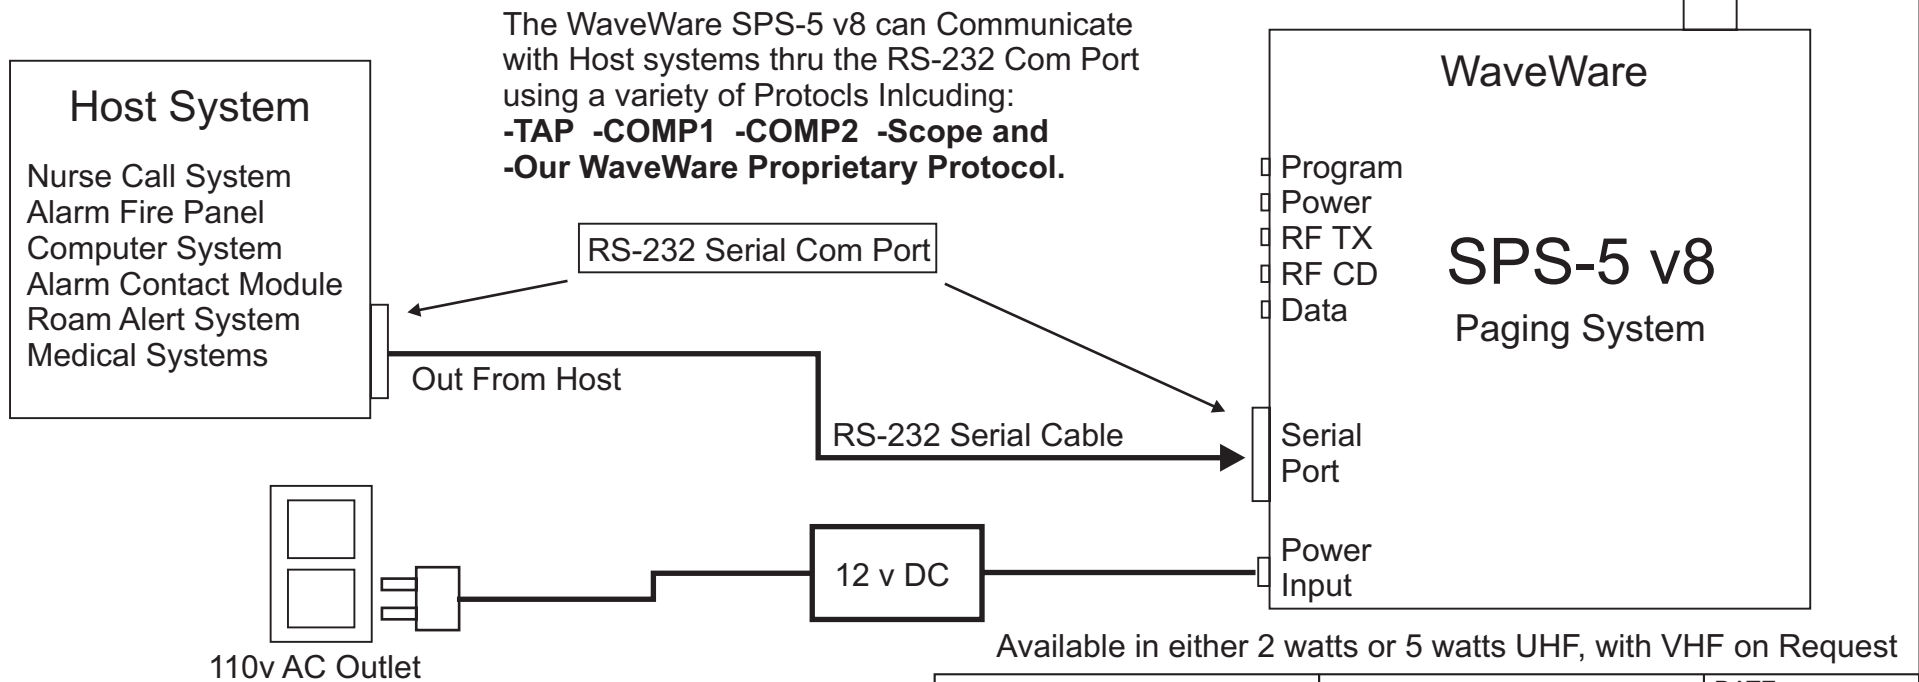

You can find the v8 Brochure and the User Manual and the v8 Encoder Setup Software on the Included Product Support CD or you can visit our Website at: [www.WirelessMessaging.com/downloads.html](http://www.WirelessMessaging.com/downloads.html)

To Setup the Pager Database, Com Port Settings and Protocols use the v8 Encoder Setup Software included on the Support CD.

MATERIAL	FINISH NONE	DATE 9-25-09
TITLE Diagram of SPS-5 v8 with Connectors and Indicators with Basic Installation Setup		DWN BY Bob Clyburn
WAVEWARE TECHNOLOGIES DALLAS, TEXAS 972-479-1702		APP. REV. 1
DWG. NUMBER		