

1. When Power on after the self test, will into "Paging mode". You will see "PAGE TO:" on the LCD.
2. You could dial the pager number that you set in "Basic Setting", the "Edit Pager". You can set the cap code, speed, group, name, function bit, pager type; alpha, numeric, tone only.
3. You also can dial the "name" to page to some one, but you have to set the "name" first. You can set the name in "Edit pager" function.
4. Enter pager no. or name then push "Enter", you can type the message on the external key board. When you finish then push "Enter" to send out the message.
5. Before you use the TE210A, you have to make sure your frequency is correct. You can into the "Frequency setting" to set the frequency
6. How to into the "Basic Setting"? Push "Esc" key, until the LCD show "Enter Password \*\*\*\*\*". Press "1234" then "Enter".
7. Push "up" or "down" to move the cursor up or down. Push "Enter" to into the item.
8. Move cursor the "Factory setting" then push "Enter"
9. Type "1234567" to get into factory settings.
10. TAP type selection: First, you have to go into the "Factory setting" to select the TAP type.

For example: you select "Gold Apollo" then "Enter". Push "Esc" to quit and save setting. Then you move cursor to "TAP type selection", push "Enter" then the TE210A in to the TAP mode.

#### LCD Message:

PAGE TO :

Enter Pager Number

Enter Password:

\*\*\*\*\* ( 1234)

#### Basic Setting

1. Edit Pagers
2. Enter New Time
3. View Last Message
4. Range Test Mode
5. Edit Alarm Message
6. View Alarm Status

- 7. Edit PPG Message
- 8. Clear All Data
- 9. TAP Type Selection
- 0. Frequency Setting
  - A. Heartbeat Setup
  - B. Factory Setup

Enter Password:

\*\*\*\*\* (1234567)

**Factory Setting**

Delay Parameter

Status Setting

Preamble Add on

Wave Output

Range Duration

Function Password

Digital B/R Test

UART Setting

TAP selection

Gold Apollo

IPage2

WaveWare

Programming