



## **ConnexLink Starter Pack Quick Install Guide**

### **Point to Point Applications**

Thank you for choosing ConnexLink as your wireless serial data solution.

The 2 enclosed ConnexLink units have been preconfigured as a Client/Server pair. They are ready to communicate at a baud rate of 57600. When connecting the units to equipment running at baud rates other than 57600, they must be reconfigured with the Configuration Software that is located on the accompanying CD or at [http://aerocomm.com/Resources/lock\\_software.htm](http://aerocomm.com/Resources/lock_software.htm).

The CD also includes the User's Manual. It is strongly recommended that you review the manual before operating the ConnexLink Devices. Manuals can also be found on the web at [http://aerocomm.com/Resources/form\\_documents.htm](http://aerocomm.com/Resources/form_documents.htm).

For Point to Point applications follow the steps below.

1. Load the ConnexLink Configuration Software and connect the Client radio to the PC's COM Port.
2. In the PC Settings section, make sure the COM Port setting is correct, the Baud Rate field must equal 57600 and the System Config field must read Point To Point.
3. Click on the Read Radio button.
4. Write down the MAC Address value.
5. The Destination Address needs to be set to FF FF FF FF FF FF.
6. Make other desired configuration changes to match the host device's serial settings then Click on the Write Radio button.
7. Disconnect the Client radio from the PC and power supply after the successful operation.
8. Connect the Server radio to the PC's COM Port.
9. Make sure the System Config setting is set to Point to Point.
10. Click on the Read Radio button.
11. The Destination Address needs to equal the Client radio's MAC Address.
12. Make other desired configuration changes to match the host device's serial settings. Also make sure that the Channel and System ID numbers match the Client radio.
13. Click on the Write Radio button.
14. Cycle power so that the new settings will take affect.