



"We Deliver Information at the Speed of Light"

WaveWare Technologies, Inc.

1.800.373.1466
Tech Support: x216

www.WirelessMessaging.com

Apollo RP-125 Repeater

Programming Instructions

Unzip and Install the Software, use a standard RS-232 Serial Cable.

Simple to Program...all you need to do is:

Read, and then Change the Frequency and Set to NB, and then Set the Power Level to Low, Set the Pager Baud Rate and Finally Write to the unit. Cycle Power to the unit and it is now ready for use.

When you "Click" on the "Link" Button and Cycle Power, it will take a moment to say "Connection Success".

Step by Step Instructions:

- 1- Have the Radio Powered-up and then Open the Software and set to the Correct Serial Com Port Number.
- 2- Then Click on the "Link" Button and "Cycle" Power to the Repeater, (unplug and then plug it back in).
- 3- "READ" (F3) the Repeater **BEFORE** making any changes to it.
- 4- Then check and correct the Frequency in Both Places (RX and TX).
- 5- Be sure to set it to NB (Narrow Band) as it usually it comes from the Factory set at WB.
- 6- Then make the Unit Output Power (watts) to 2 watts (LOW). **Not** 5 watts (HIGH).
- 7- Then at the Bottom of the Screen, Set the "Baud Rate" to be whatever the "Pagers" are using.
- 8- **DO NOT** Change anything else at all or the unit will Not work properly.
- 9- After all is done, Program or "Write" (F4) to the Repeater.
- 10- Go to "File-Save As" and Save this Program, as a reference for any Future needs.

This completes the Programming of the RP-125.

Any Questions please contact Technical Support at x216.