

Apollo TE-210 Series

Voice Prompt Programming Instructions



The steps below explain how to change the voice prompts stored in the Apollo TE-210 Series Paging System.

1. Connect the Apollo TE-210 Series Paging System to an “Analog” Extension.
2. Dial the Extension Number.
3. After the TE-210 Series System Prompts you to “Enter Pager Number”, press *1234#X to access the Programming Options. (“X” represents the numbers 1, 2, 3, 4, 5).
4. Immediately after pressing the # key, the TE-210Series System will respond with a Loud “Beep”. At this point you may input voice instruction Options 1- 5 as explained below.

Voice Instruction 1 - Record a Greeting; (EX: “Enter Pager Number”).

Voice Instruction 2 - Record an Invalid Pager Number Message; (EX: “Invalid Pager Number”).

Voice Instruction 3 - Record the message heard after dialing the pager number; (EX: “Enter Message”).

Voice Instruction 4 - Not Used

Voice Instruction 5 - Record the Message heard after the Page has been sent; (EX: “Message Sent”).

**** Each Message has a Maximum Recording Length of 10 Seconds. ****